





QUICK GUIDE

How to change a damaged lock


Reinstall the panel with the damaged lock.
Take the glass out of the frame.

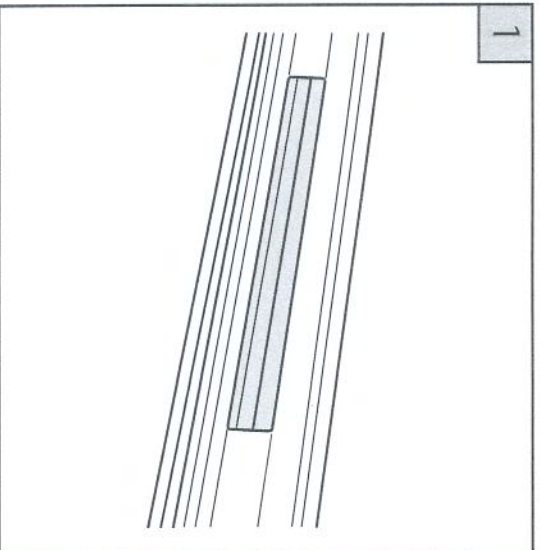


1 Make a cutout into the panel as shown.
The dimensions are 20 mm x 350 mm
which is approx. 1 3/16 inch x 14 inch.

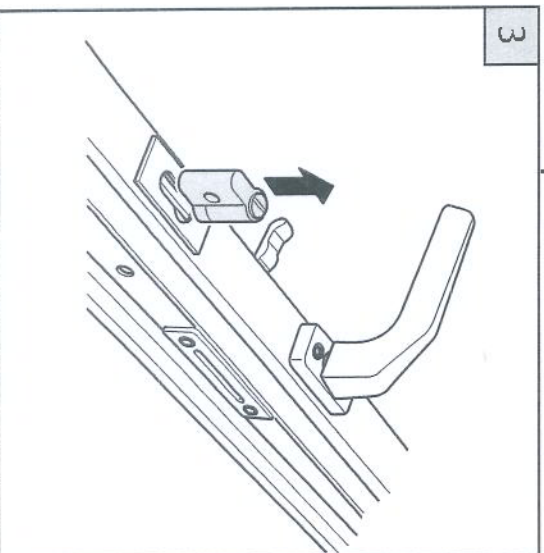


3 Take off the PZ as shown.

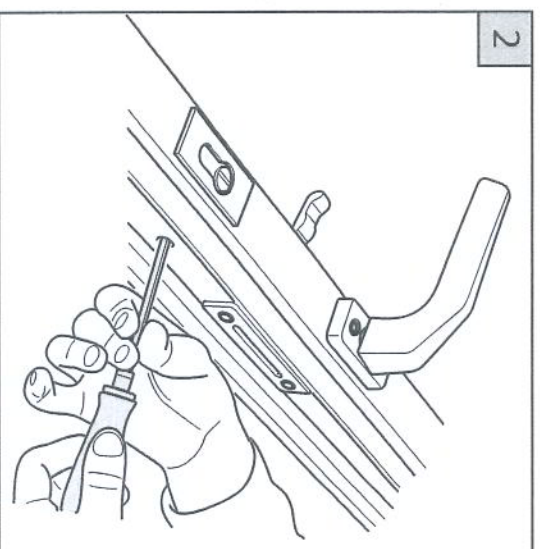


2 Solve they screw

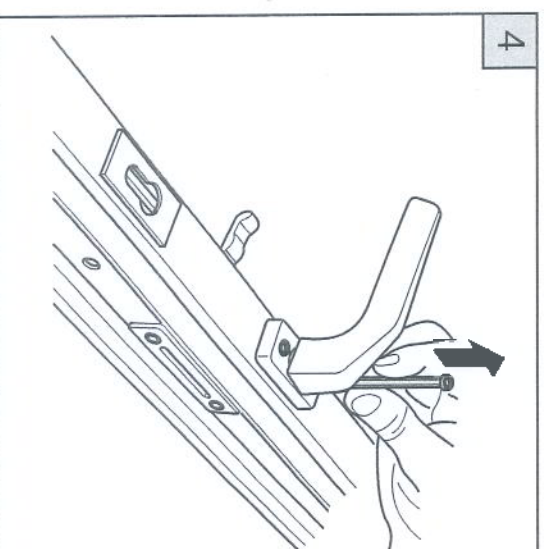



4 Solve they screw

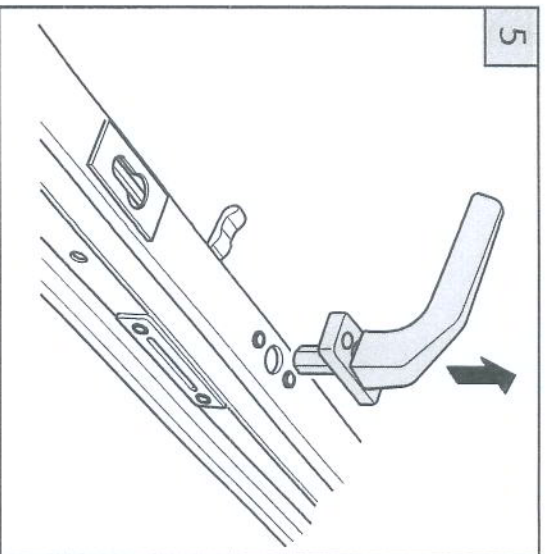


Take off the handle as shown.

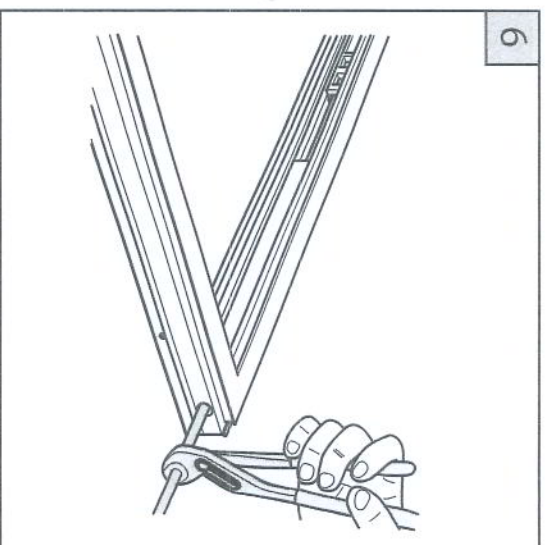

Slide the lock incl. the rods up or down and remove the rod.

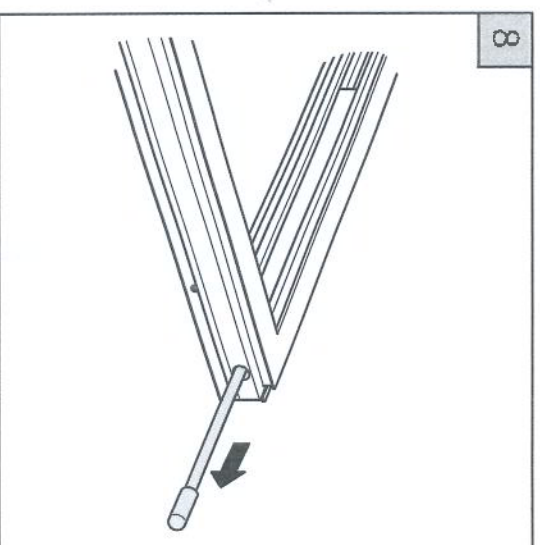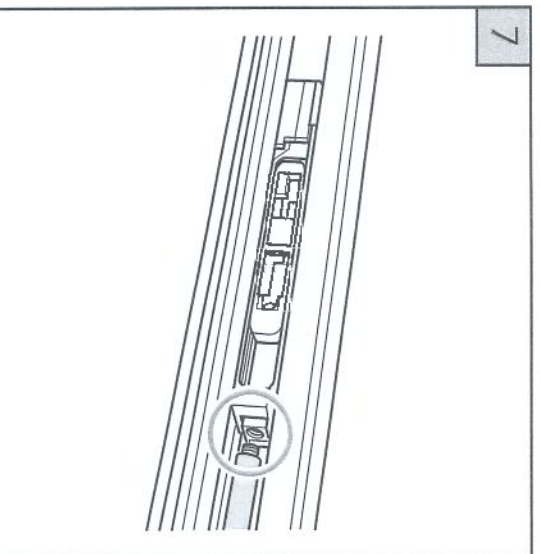

Slide the Lock now to the opposite side and remove the second rod

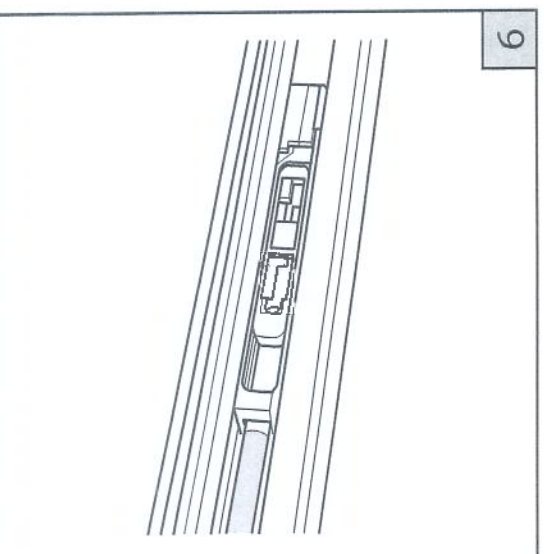

If that is done you can replace the lock against trough the cutout.