
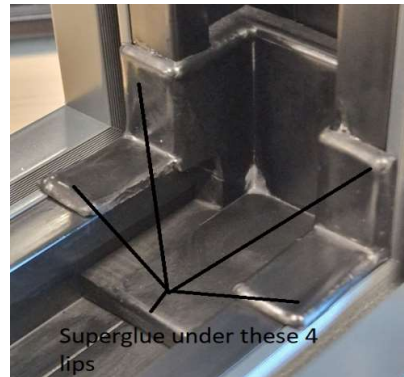


## Photos for the cutting of Rubber Corner blocks (ACVG598)

For situations of shrunken UG061 Slider track PVC Inserts, use a sharp knife to cut rubber block to the same as below

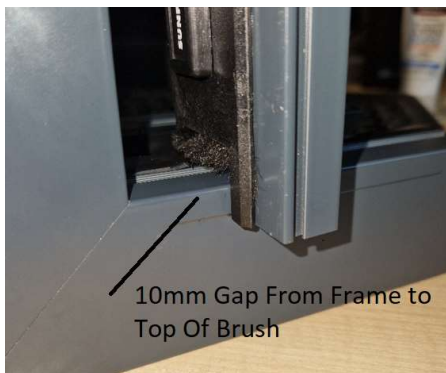

After cutting, insert rubber block into frame until fully into the corner.

Door runs freely over corner moulding.

